


Arctic Cat Button Kit Installation

Step 1) Peel off the backing that protects the glue from the back of the button block.

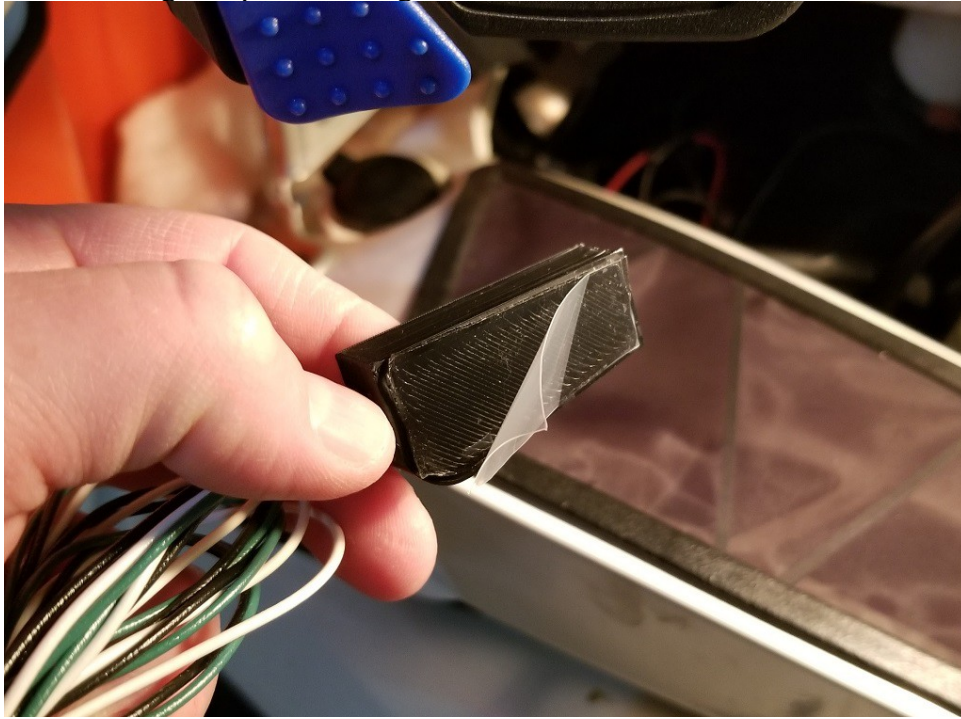


Step 2) Affix the button block underneath the high beam switch.




Step 3) Route and affix the wire loom covered wires to the steering post.


Next to button block:

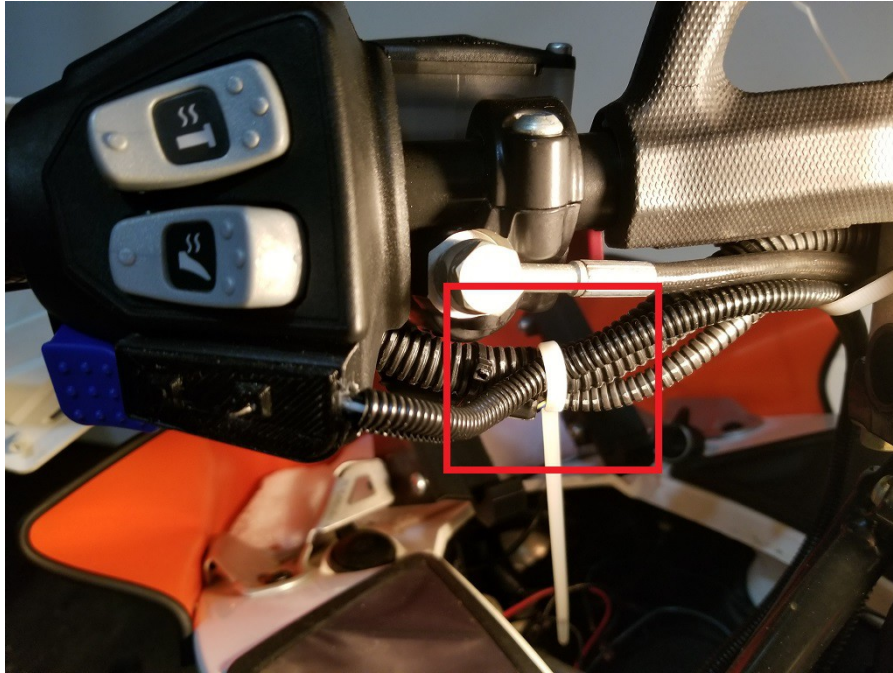


On front of steering post:

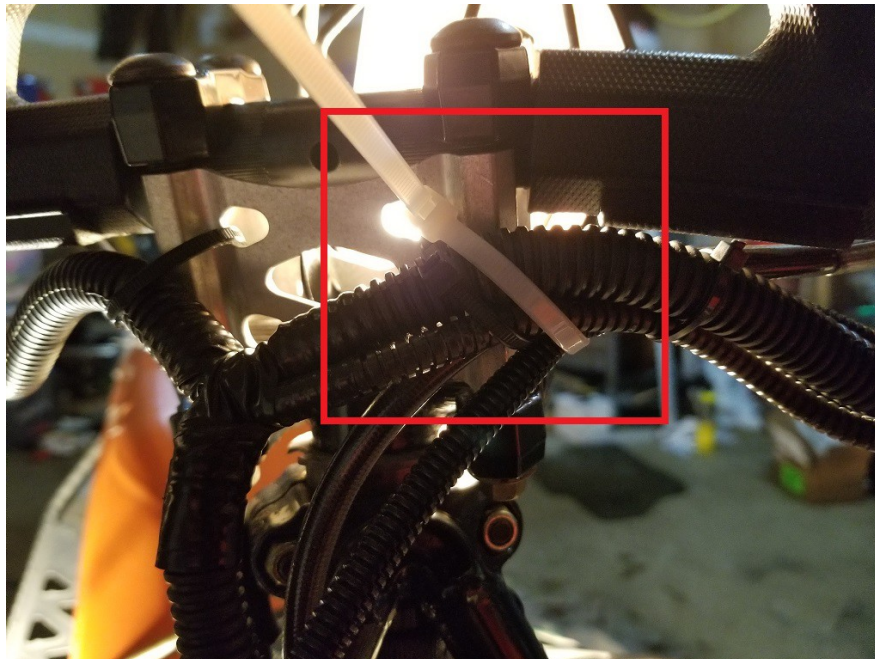


Step 4) At the bottom of the steering post, remove enough black electrical tape from the wiring harness that connects to the hood to allow the black wire to be located and tap spliced to the black wire of the button kit.

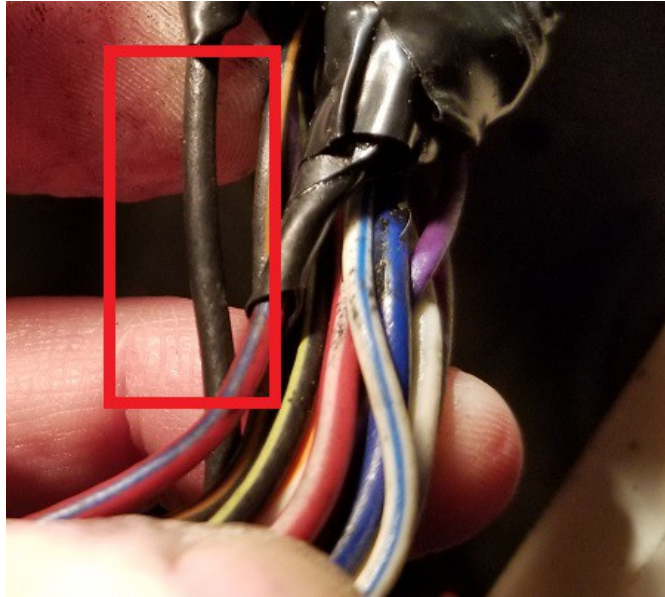

Step 5) **Ensuring that the hood's electrical harness is unplugged for this and the following steps,** pop out the white cover on the front and the black wire guide at the back of the gauge's electrical connector, and remove the high beam pin. For additional instruction take a look at the Alternate Pin Removal instructions at the bottom of the following page:
<http://www.nextstagegauges.com/boost-kit-instructions>

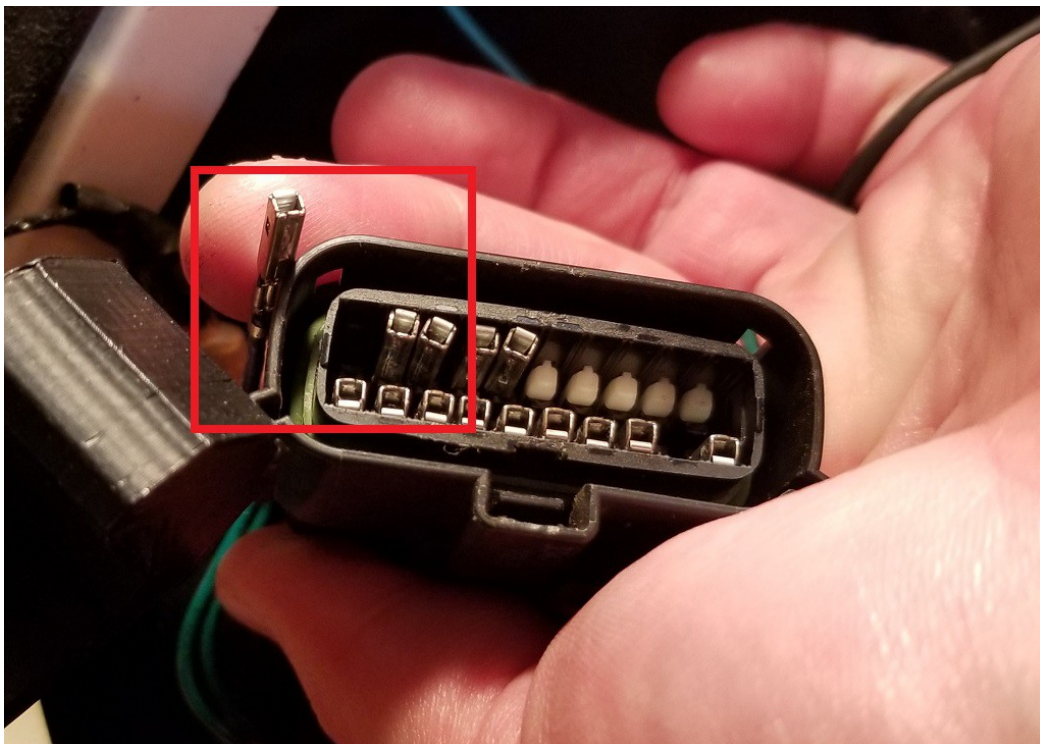

Step 6) Install the button kit wires in the following locations. Then reassemble the gauge's electrical connector and reconnect the hood's wiring harness.

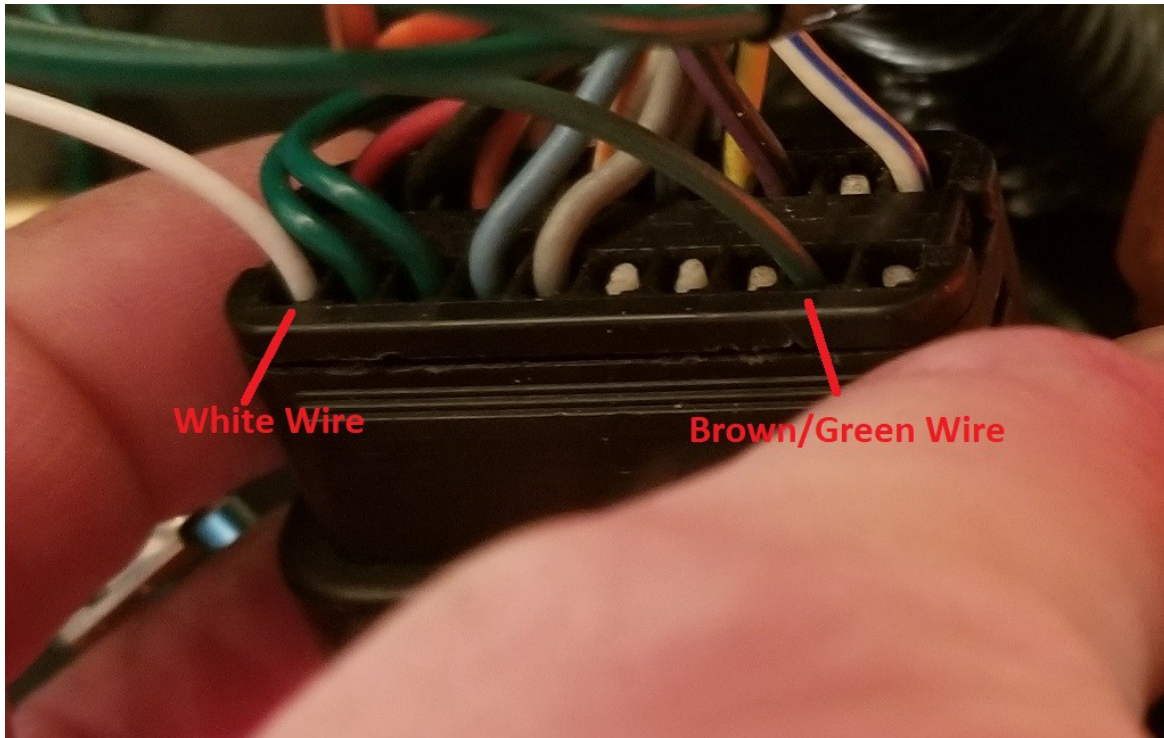

Step 7) With the snowmobile running (or the ignition on for 4 strokes), access the Vehicle Settings dialog by pressing the three vertical squares in the upper right of the screen, and then selecting Vehicle Settings.

Step 8) Swipe up until "Highbeam as Button" is visible, and check the box. Then swipe up until the OK button is visible and select it.

Step 9) Restart the snowmobile and test the buttons. Double pressing the buttons will zoom in and out, and single presses will cycle through the odometer/trips/hours or change the current display. Long presses of the button will reset the trip odometer currently visible.